


CESSNA T337 SKYMASTER SN 0569-01815

CESSNA T337P SKYMASTER SN P3370001-0225

FRONT ENGINE

Item	Part Number	Description
1	1555010-92	CROSSOVER CYL #6
2	1555010-79	STACK CYL #4
3	1555010-90	STACK CYL #2
4	1555010-21	CROSSOVER CYL #5
5	1555010-10	STACK CYL #3
6	1555010-101	HEADER
7	1555010-87	BYPASS ADAPTER
8	1554004-2	TAILPIPE
NS	1254000-5	TAILPIPE EXTENSION (Camera Install)
9	1555010-94	RISER RIGHT FRONT CYL #5
10	1555010-96	RISER RIGHT CENTER CYL #3
11	1555010-98	RISER RIGHT REAR CYL #1
12	1250860-29	CLAMP HALF
13	NH1000897-40	CLAMP TAILPIPE
NS	1550148-2	GASKET WASTEGATE
NS	970	GASKET
NS	1550276-1	DUCT ASSY HEATER OUTLET
NS	63288-4	GASKET TURBO INLET
NS	1550032-32	INDUCTION AIR BOX SN 00569 01193
NS	1550032-41	INDUCTION AIR BOX SN 01194 01815
NS	1550025-1	SUPPORT TURBO CHARGER REAR
NS	1550021-1	SUPPORT TURBO CHARGER FWD
NS	1451008-30	ENGINE MOUNT
NS	J-9613-31	SHOCK MOUNT
NS	VARIOUS	SEAT BASE
14	1516133-33	FUEL TANK LH INBOARD SN 33701672 & On Standard Range
15	1516133-34	FUEL TANK RH INBOARD SN 33701672 & On Standard Range
16	1516131-33	FUEL TANK LH OUTBOARD SN 33701672 & On Standard Range
17	1516131-34	FUEL TANK RH OUTBOARD SN 33701672 & On Standard Range

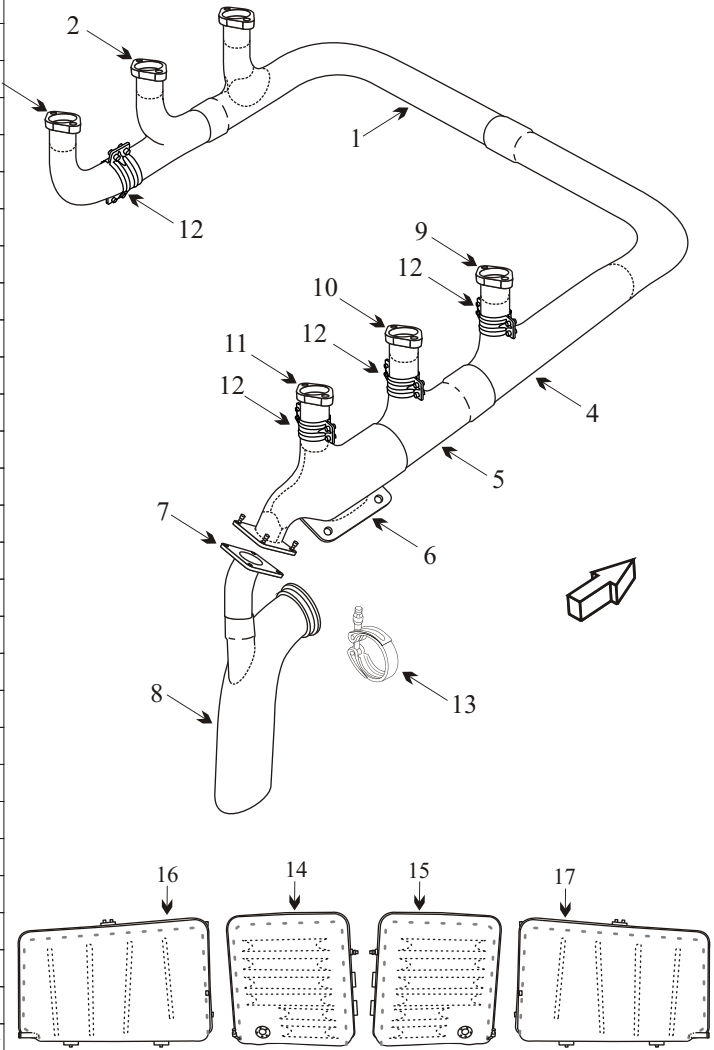

● Inspect joints for freedom of movement and distortion.

● Inspect under clamps for corrosion, poor fit or cracks.

P337001 - P3370193

Item	Part Number	Description	Item	Part Number	Description
18	1516131-1	FUEL TANK LEFT HAND MID	22	1516131-2	FUEL TANK RIGHT HAND MID
19	1516132-1	FUEL TANK LEFT HAND OUTBOARD	23	1516132-2	FUEL TANK RIGHT HAND OUTBOARD
20	1516057-1	FUEL TANK LEFT HAND INBOARD SN 337001 3370148	24	1516057-2	FUEL TANK RIGHT HAND INBOARD SN 337001 3370148
20	1516057-17	FUEL TANK LEFT HAND INBOARD SN 3370149 3370193	24	1516057-18	FUEL TANK RIGHT HAND INBOARD SN 3370149 3370193
21	1426014-13	SUMP ASSY LEFT HAND	25	1426014-12	SUMP ASSY RIGHT HAND

